

3170 Series Touch Screen POS Workstation

USER GUIDE

Congratulations on your purchase of UTC RETAIL's innovative 3170 Series Touch Screen POS Workstation. The 3170 Series was designed to conserve counter space and it comes standard with a rich set of features. This guide will acquaint you with the 3170 Series Workstation's features and functionality.



This document provides instruction and information for product users, and may not be used for any purpose other than its intended use. This document must be downloaded in its entirety; it may not be reproduced, stored or transmitted in part without the prior written permission of UTC RETAIL. All attempts have been made to ensure that the information presented in this document is correct. No liability expressed or implied, will be assumed by UTC RETAIL, its dealers, or affiliates, for damage resulting from the use of this information.

The 3170 Series Touch Screen POS Workstation complies with UL60950 requirements. This equipment has been tested and found to comply with the limits for a Class "A" digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

Contents

PRODUCT INFORMATION	3
Product Components	3
Product Safety	3
Technical Specifications	4
Operating System and Drivers	4
Installing Customer-Specific Applications	4
Care and Cleaning	4
DIAGNOSTICS AND TROUBLESHOOTING	4
System Boot	4
SERVICE AND TECHNICAL SUPPORT	5
TECHNICAL INFORMATION	5
UTC RETAIL 3170 Series Motherboard Jumpers	5
Motherboard Jumpers and Connectors	6
Serial Port Power Selection	6
Cash Drawer Port Power Selection	9
Audio Line-out Jack	9
+24VDC Power Jack	9
APPENDIX A	10
Programming Guide: 3170 Rear Customer Display	10
Display Control Features and Commands	10
Serial Operating Parameters Selection	14
Appendix B Programming Guide: 3170 Cash Drawer Driver	16

Product Information

The 3170 Series Touch Screen POS Workstation is designed for use in restaurants, convenience stores, cafeterias and other specialty retail establishments. It is highly configurable, has easy access to connectors, and a large selection of interface ports for connectivity to printers, cash drawers, scanners, keyboards, and other peripherals.

Product Components

The 3170 Series product includes:

- 3170 Series main unit
- AC Line Cord

Depending on the configuration you have purchased, the following optional components may also be provided:

- Magnetic Strip Reader (MSR) unit and Installation Guide
- Rear Customer Display (RCD) unit and Installation Guide
- WLAN Kit (802.11 b/g/n)

Product Safety

DANGER: High Voltage



This unit contains high voltage. There is a risk of electrical shock if the case is opened. If service is required, contact an authorized service agent or UTC RETAIL.

WARNING: CMOS Battery Damage



Replace your system's battery only with CR-2032 (or equivalent) 3V Lithium-Ion coin cell battery to avoid risk of personal injury or physical damage to your equipment. Always dispose of used batteries according to local ordinance, where applicable. Any damage due to not following this warning will void your warranty.

WARNING: Access to Internal Components



All access to internal components of the 3170 Series unit is restricted to Authorized Service Personnel only. Opening the case or service by anyone else will automatically void the warranty on this product.

WARNING: Laser Radiation (CD or DVD Drive)



Invisible or visible laser radiation may be present when Optical Devices are present. When open, do not stare into the beam or view directly with optical instruments.

WARNING: Electrical Shock



Use caution when connecting cables. To avoid electric shock, do not connect safety extra-low voltage (SELV) circuits to telephone-network voltage (TNV) circuits. Local Area Network (LAN) ports contain SELV circuits, and telephone ports contain TNV circuits. Some LAN ports and some telephone ports use RJ-45 connectors.

CAUTION:



If your 3170 contains the WLAN accessory: This 3170 complies with FCC radiation exposure limits for an uncontrolled environment. The 3170 should be installed and operated at a distance greater than 20 centimeters (8 inches) between yourself and any bystander to comply with the Radiation Exposure Requirements. Changes or modifications not expressly approved by UTC RETAIL could void your authority to operate the 3170.

CAUTION:



Damage to the logic module components may occur if AC power is not removed from the product prior to attaching any accessories.

CAUTION:



Do not hot plug to the rear panel serial ports. Turn off the 3170 Series Unit before connecting serial port cables.

CAUTION:



Do not use the Magnetic Stripe Reader (MSR) unit as a handle when moving or carrying the 3170 Series.

Technical Specifications

3170 Series Touch Screen POS Workstation	
Processor	Intel® Pentium® G850 Dual Core
Storage	Hard disk drive (HDD), 320GB Second HDD, 320GB (Optional)
Memory	Up to 16 GB DDR3 DRAM (2 DIMM slots)
Input/Output	(1) Cash drawer ports, +12VDC or +24VDC, default setup for +24VDC cash drawer (4) RS232 serial ports on rear I/O panel, default setup is COM1 unpowered, COM2-4 powered (5) USB ports on rear I/O panel and (1) on front I/O panel (1) SVGA port (1) 10/100/1000 Base-T Ethernet port (1) PS/2 port (1) Audio Line-out jack, 3.5mm (1) 24VDC power jack (Epson printer compatible)
Display	Size/type: 15 in. (38 cm) TFT LCD flat panel Pixels/resolution: 1024 x 768 pixels
Touch Screen	Touch screen: 5-wire resistive (COM5 interface)
Mechanical Features	Safety: UL60950 Listed Dimensions: 15 in. (38 cm) wide x 17 in. (43 cm) high x 15 in. (38 cm) deep Weight: ~17 lbs(7.7 kg)
Optional Features	MSR: ID Tech, 3-track (USB interface) Rear Customer Display: 2x20 VFD, 10.5mm x 5.5mm character size Internal WLAN: Factory installed, 802.11 b/g/n
Power Requirements	110 VAC, 60 Hz 0.5A (typical)
RoHS	Compliant

Operating System and Drivers

The 3170 Series is typically shipped with an operating system and specific drivers installed. Individual video, audio, network, etc. drivers can be downloaded from the UTC RETAIL website at: www.utcretail.com.

Installing Customer-Specific Applications

It is suggested that all applications be fully tested on the 3170 Series product to ensure that there are no hardware conflicts. This is typically done prior to store installation and within a technical environment.

Care and Cleaning

Never use pens, pencils, fingernails, or other sharp objects on the Touch Screen. **These will damage the screen and void the product's warranty.** Turn the unit OFF before cleaning the screen or case. Any standard glass cleaner can be used to clean the touchscreen, but avoid products containing ammonia. Always spray the glass cleaner on the cloth or towel and then clean the touch screen. Glass cleaner sprayed directly on the monitor could possibly leak inside a non-sealed unit and cause damage.

Diagnostics and Troubleshooting

WARNING: Unauthorized service will automatically void the warranty on the product(s). Contact UTC RETAIL Technical Support at 1.800.349.0546 or (585) 924.9500 if you have any questions.

System Boot

The 3170 POS has a BIOS that is based upon the Unified Extensible Firmware Interface (UEFI) specification. This new power-up specification allows for a much faster system boot to the Windows® Desktop.

To perform a one-time modified boot order, keep pressing F7 during the boot process until the Boot Order menu appears.

To access the BIOS during the system boot, keep pressing Delete during the boot process until the BIOS Main screen appears.

Service and Technical Support

Assistance and customer service are available from your dealer or authorized service provider. If your dealer or service provider cannot answer your questions or provide satisfactory service, call UTC RETAIL Technical Support. When calling for assistance or service information, please be ready to provide the serial number, which can be found on a label on the bottom of the 3170 Series. If the product needs to be returned to our repair facility, please use the original packing material and shipping carton.

For assistance, service and product information, contact:

UTC RETAIL
100 Rawson Road
Victor, NY 14564
Phone: 1.800.349.0546 or (585) 924.9500
Fax: (585) 924.1434
www.utcretail.com

Intel® and Pentium® are registered trademarks of Intel Corporation. Windows® is a registered trademark of Microsoft Corporation.


Technical Information

UTC RETAIL 3170 Series Motherboard Jumpers

Listed below are the motherboard jumpers. Only the JP3, JP4 and JP11 are user configurable. Do not change the settings of the other jumpers.

Terminal Block	Function
JP3	COM1 & COM2 Power Setting
JP4	COM3 & COM4 Power Setting
JP5	CMOS Reset
JP6	
JP7	
JP8	System Indicator (factory use)
JP9	LCD backlight setting
JP10	LCD ID Setting
JP11	Cash Drawer Power Setting
JP13	System Reset
JP14	ME update

Motherboard Jumpers and Connectors

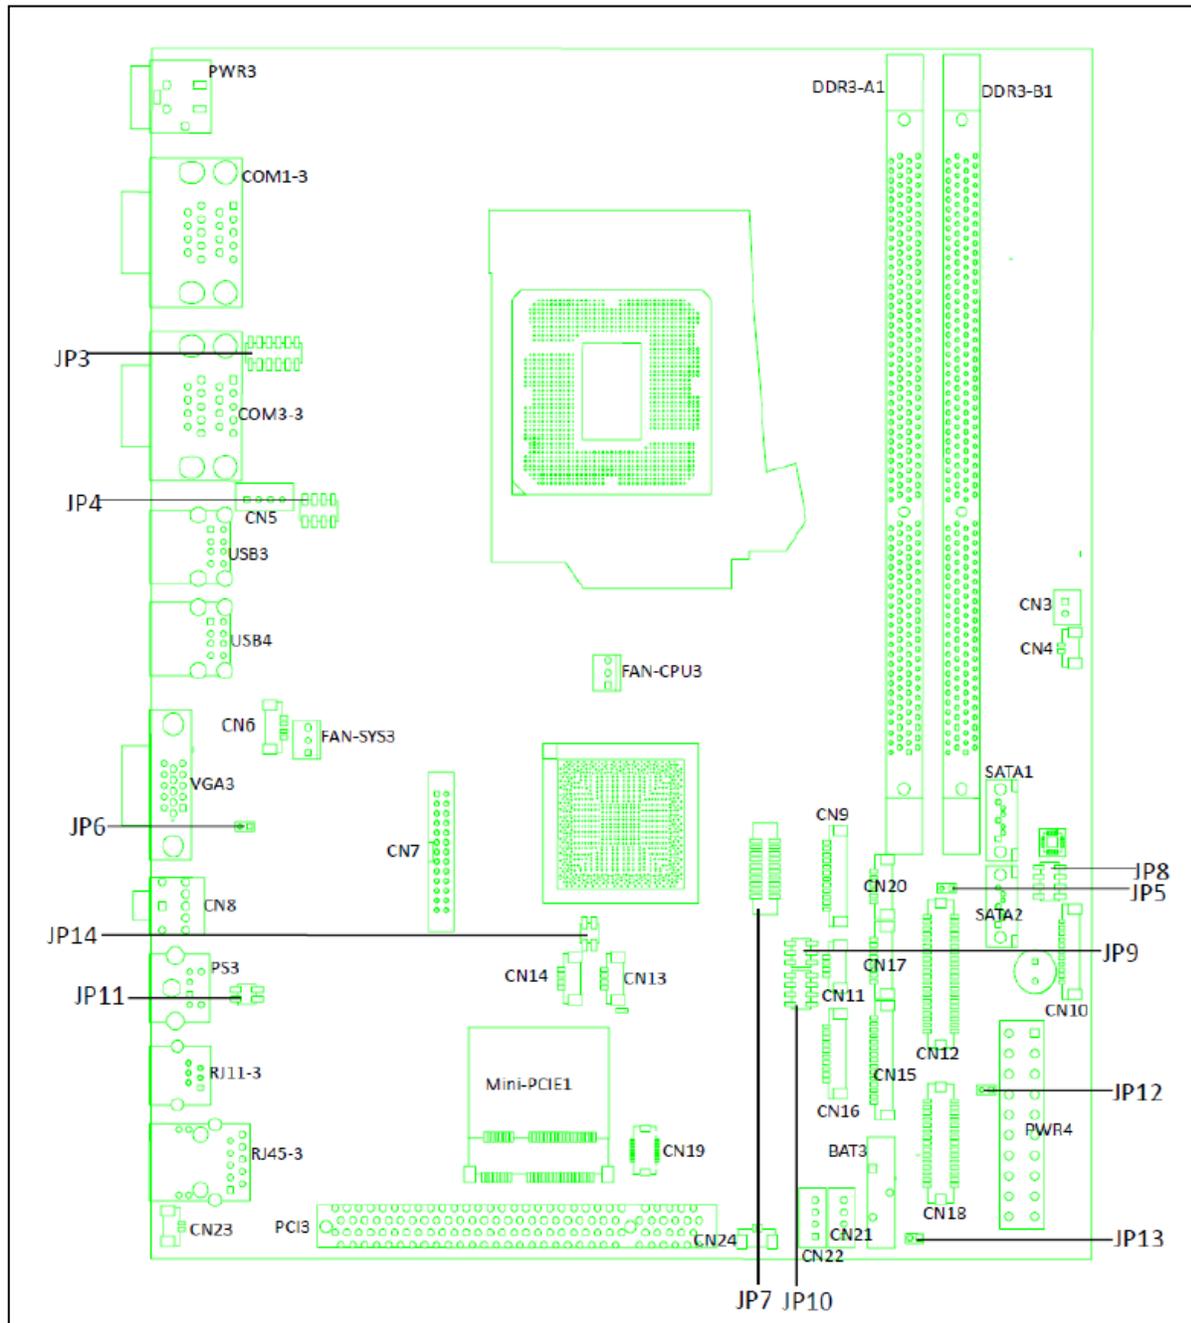

Serial Port Power Selection

The 3170 Series COM1 serial port is shipped factory set for modem operation. Pin 1 is for DCD (Data Carrier Detect), pin 9 for RI (Ring Indicator). Therefore, JP3 (COM1) has pins 1 and 2 jumpered.

COM2, COM3 and COM4 are shipped factory set to provide +5VDC on Pin 9. Therefore, JP3 has pins 9 and 10 jumpered, JP7 and JP6 have pins 1 and 2 jumpered, and pins 9 and 10 jumpered.

Each of these ports may be configured to provide +5V or +12V output to Pin 1 or Pin 9 to power your serial port peripherals. **They must not be setup to provide power to Pin 1 and Pin 9 simultaneously. Do not hot plug onto a COM port configured to provide power to pin 1 or pin 9. You run a risk of shorting the powered pin to the port's shield while hot plugging. By default, COM2, COM3 and COM4 have +5VDC on pin 9.**

▲ = factory default setting

COM1 and COM2 Power Settings


Function		JP3						
		(1 - 2)	(3 - 4)	(5 - 6)	(7 - 8)	(9 - 10)	(11 - 12)	
COM1 Pin 9	▲ RI		1	3	5	7	9	11
		<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
		<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
		2	4	6	8	10	12	
	+5V		1	3	5	7	9	11
		<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
		<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
		2	4	6	8	10	12	
	+12V		1	3	5	7	9	11
<input type="checkbox"/>		<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
<input type="checkbox"/>		<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
	2	4	6	8	10	12		
COM2 Pin 9	RI		1	3	5	7	9	11
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
		2	4	6	8	10	12	
	▲ +5V		1	3	5	7	9	11
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
		2	4	6	8	10	12	
	+12V		1	3	5	7	9	11
<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
	2	4	6	8	10	12		

COM3 and COM4 Power Settings

COM3 and COM4 can be set to provide power to your serial device. The voltage can be set to +5V or +12V by setting jumper JP4 on the motherboard. When enabled, the power is available on pin 9 of the DB9 connector. By default, this power option is **enabled** in the BIOS.

Enable COM3/COM4 power in BIOS

1. Power on the system, and press the key when the system is booting up to enter the BIOS Setup utility.
2. Select the Advanced tab
3. Select Power Configuration COM/VGA/CD Ports and press <Enter> to go to display the available options.
4. To enable the power, select COM3 Power Setting or COM4 Power setting and press <Enter>. Select Power and press <Enter>.
5. Save the change by pressing F10.

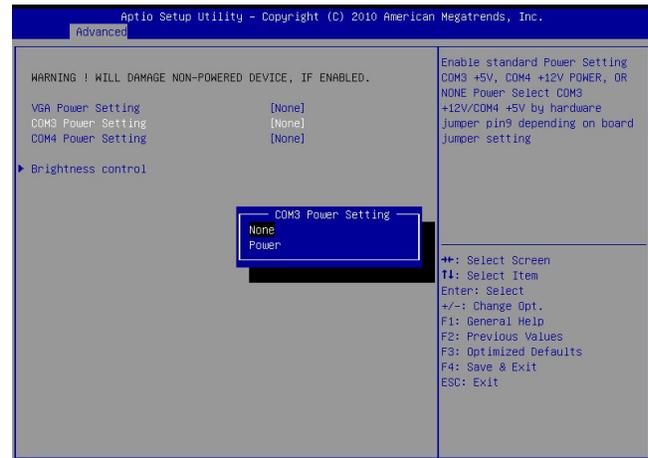

Function		JP4			
		(1 - 2)	(3 - 4)	(5 - 6)	(7 - 8)
COM3 Pin 9	▲+5V	1	3	5	7
		<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	+12V	1	3	5	7
		<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
COM4 Pin 9	▲+5V	1	3	5	7
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
	+12V	1	3	5	7
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Cash Drawer Port Power Selection

The 3170 Series Cash Drawer port is shipped factory set to drive a +24VDC cash drawer circuit. Therefore, JP11 has pins 1 and 2 jumpered.

Cash Drawer Port Power Settings

Function	JP3 (1 – 2) (3 – 4)								
Cash Drawer +12VDC	<table border="1"><tr><td>1</td><td>3</td></tr><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr><tr><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr><tr><td>2</td><td>4</td></tr></table>	1	3	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	2	4
1	3								
<input type="checkbox"/>	<input checked="" type="checkbox"/>								
<input type="checkbox"/>	<input checked="" type="checkbox"/>								
2	4								
▲ Cash Drawer +24VDC	<table border="1"><tr><td>1</td><td>3</td></tr><tr><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr><tr><td>2</td><td>4</td></tr></table>	1	3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	2	4
1	3								
<input checked="" type="checkbox"/>	<input type="checkbox"/>								
<input checked="" type="checkbox"/>	<input type="checkbox"/>								
2	4								

Audio Line-out Jack

The 3170 Series 3.5mm line-out jack will provide an audio output signal to an external pair of computer speakers. These speakers must be powered by a user supplied external power source.

+24VDC Power Jack

The 3170 Series +24VDC power jack will provide power to operate Epson POS printers. Contact UTC RETAIL for custom cable part number 11029567.

Appendix A

Programming Guide: 3170 Rear Customer Display

Note: If you are using the customer display with an OPOS, JavaPOS, or POS for .Net application, this document does not apply to you. You will need to use the correct driver available on the UTC RETAIL web site at www.utcretail.com.

The 3170 Rear Customer Display (RCD) operates by converting recognized data, supplied by serial communication, into a display message. The supplied data may also contain commands that control the display.

The 3170 RCD uses a limited command structure for display control, requiring minimal programming effort. The table below lists the display control features of the 3170 RCD and control codes (in ASCII, DEC, and HEX expression). The display control command structure, with examples, is described in this section.

Display Control Features and Commands

The following table outlines the 3170 RCD control features and commands:

Feature	ASCII	DEC	HEX
Dimming	<EOT>x	04, x	04, x
Back Space	<BS>	08	08
Horizontal Tab	<HT>	09	09
Line Feed	<LF>	10	0A
Carriage Return	<CR>	13	0D
Display Position	<DLE>p	16, p	10, p
Normal Display	<DC1>	17	11
Vertical Scrolling	<DC2>	18	12
Reset	<US>	31	1F
Flashing Text Start	<FS>	28	1C
Flashing Text Stop	<GS>	29	1D
Clear to End of Line	<CAN>	24	18
Clear to End of Display		25	19
Home and Clear Display	<RS>	30	1E

Dimming Feature

<EOT>x 04 DEC 04 HEX

Brightness can be controlled to four levels by using this function. After writing 04h to the display, the next byte sent will set the brightness. The table below lists the display dimming commands in ASCII, DEC and HEX expression.

Dimming Level	ASCII	DEC	HEX
100 %	-	255	FF
60 %	,	96	60
40 %	@	64	40
20 %	Space	32	20

Back Spacing Feature

<BS> 08 DEC 08 HEX

When the backspace command is executed, the write-in position is shifted to the left one position, erasing the character, if any, in that position. When the write-in position is in the first (read from left to right) position of the first row, the write-in moves to the last position of the second row. When the write-in is in the first position of the second row, the write-in moves to the last position of the first row.

Horizontal Tab Feature

<HT> 09 DEC 09 HEX

DC1 Mode (Normal Display Mode)

The write-in position is shifted to the right one position. When the write-in is in the last position of the first row, the write-in moves to the first position of the second row. When the write-in is in the last position of the second row, the write-in moves to the first position of the first row.

DC2 Mode (Vertical Scroll Mode)

When the write-in is in the last position of the second row, the characters displayed in the second row are shifted up to the first row and the write-in moves to the first position of the second row. This action clears the second row.

Line Feeding Feature

<LF> 10 DEC 0A HEX

DC1 Mode (Normal Display Mode)

The write-in moves up or down to another row, staying in the same horizontal position.

DC2 Mode (Vertical Scroll Mode)

When the write-in is in the second row, the characters displayed there are shifted up to the first row, leaving the write-in at its present position. This action clears the second row. When the write-in is in the first row, the write-in moves down to the second row.

Carriage Return Feature

<CR> 13 DEC 0D HEX

The write-in moves to the first position of the same row.

Display Position Feature

<DLE> 16 DEC 10 HEX

Use the display positioning function to specify the write-in starting position.

After writing a 10h to the display, enter a position byte from the following Character Position Chart (HEX):

Row	Position Bytes																			
1	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F	10	11	12	13
2	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F	20	21	22	23	24	25	26	27

Normal Display Mode Feature

<DC1> 17 DEC 11 HEX

After writing a character, the write-in is shifted automatically to the right one position. When the write-in is in the last position of the first row, the write-in moves to the first position of the second row. When the write-in is in the last position of the second row, the write-in moves to the first position of the first row.

Vertical Scroll Mode Feature

<DC2> 18 DEC 12 HEX

After writing the characters up to the last position of the second row, all characters displayed in the second row are shifted to the upper row (first row), clearing the second row.

Reset

<US> 31 DEC 1F HEX

All characters displayed are erased, and the write-in position (cursor position) is set in the first position of the first row. The display mode returns to the power-on default set-up.

Flashing Text Start

<FS> 28 DEC 1C HEX

After receipt of this command, all subsequent data received will flash, until a <GS> command is received. Flashing will be terminated with the flashing text stop command.

Flashing Text Stop

<GS> 29 DEC 1D HEX

After receipt of this command, the characters following will not flash.

Clear to End of Line Feature

<CAN> 24 DEC 18 HEX

This command will clear out the display from the current write-in position to the end of the current line. The current write-in position will not change.

Clear to End of Display Feature

** 25 DEC 19 HEX**

This command will clear out the display from the current write-in position to the end of the second line. The current write-in position will not change.

Home and Clear Display Feature

<RS> 30 DEC 1E HEX

This command will clear the display and move the write-in position to the first position of the first row.

Display Character Codes

For a full listing of the display character codes used by the 3170 RCD, refer to the ASCII Character Set in the table on the following pages.

Serial Operating Parameters Selection

The 3170 RCD ships factory set for 9600 baud, 8 data bits, and no parity. If desired, the baud and parity can be changed with a few simple steps.

Remove the lens cover by depressing the 2 tabs on the bottom of the display. While the tabs are depressed, carefully rotate the lens cover off of the display, starting at the bottom of the display. Once the lens is removed, the headers used to select the baud rate and parity will be visible. They are located on the printed circuit board to the right of the vacuum fluorescent display. The shorting jumpers (supplied with unit) can be added to change both the baud rate and/or parity.

The diagram below shows positions of the shorting jumpers needed for different baud rates and parities. Up to 4 shorting jumpers may be needed.

BAUD RATE			
9600 Baud	. . . 7	2400 Baud	. . . 7
DEFAULT	. . . 6		. . . 6
	. . . 5		. . . 5
	. . . 4		. . . 4
	. . . 3		. . . 3
	. . . 2		. . . 2
	. . . 1		. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6
			. . . 5
			. . . 4
			. . . 3
			. . . 2
			. . . 1
			. . . 7
			. . . 6

ASCII Character Set

DEC	HEX	ASCII	DEC	HEX	ASCII	DEC	HEX	ASCII	DEC	HEX	ASCII
0	00	Ctrl-@ (NUL)	32	20	Space	64	40	@	96	60	`
1	01	Ctrl-A (SOH)	33	21	!	65	41	A	97	61	a
2	02	Ctrl-B (STX)	34	22	"	66	42	B	98	62	b
3	03	Ctrl-C (ETX)	35	23	#	67	43	C	99	63	c
4	04	Ctrl-D (EOT)	36	24	\$	68	44	D	100	64	d
5	05	Ctrl-E (ENQ)	37	25	%	69	45	E	101	65	e
6	06	Ctrl-F (ACK)	38	26	&	70	46	F	102	66	f
7	07	Ctrl-G (BEL)	39	27	'	71	47	G	103	67	g
8	08	Ctrl-H (BS)	40	28	(72	48	H	104	68	h
9	09	Ctrl-I (HT)	41	29)	73	49	I	105	69	i
10	0A	Ctrl-J (LF)	42	2A	*	74	4A	J	106	6A	j
11	0B	Ctrl-K (VT)	43	2B	+	75	4B	K	107	6B	k
12	0C	Ctrl-L (FF)	44	2C	,	76	4C	L	108	6C	l
13	0D	Ctrl-M (CR)	45	2D	-	77	4D	M	109	6D	m
14	0E	Ctrl-N (SO)	46	2E	.	78	4E	N	110	6E	n
15	0F	Ctrl-O (SI)	47	2F	/	79	4F	O	111	6F	o
16	10	Ctrl-P (DLE)	48	30	0	80	50	P	112	70	p
17	11	Ctrl-Q (DC1)	49	31	1	81	51	Q	113	71	q
18	12	Ctrl-R (DC2)	50	32	2	82	52	R	114	72	r
19	13	Ctrl-S (DC3)	51	33	3	83	53	S	115	73	s
20	14	Ctrl-T (DC4)	52	34	4	84	54	T	116	74	t
21	15	Ctrl-U (NAK)	53	35	5	85	55	U	117	75	u
22	16	Ctrl-V (SYN)	54	36	6	86	56	V	118	76	v
23	17	Ctrl-W (ETB)	55	37	7	87	57	W	119	77	w
24	18	Ctrl-X (CAN)	56	38	8	88	58	X	120	78	x
25	19	Ctrl-Y (EM)	57	39	9	89	59	Y	121	79	y
26	1A	Ctrl-Z (SUB)	58	3A	:	90	5A	Z	122	7A	z
27	1B	Ctrl-[(ESC)	59	3B	;	91	5B	[123	7B	{
28	1C	Ctrl-\ (FS)	60	3C	<	92	5C	\	124	7C	
29	1D	Ctrl-] (GS)	61	3D	=	93	5D]	125	7D	}
30	1E	Ctrl-^ (RS)	62	3E	>	94	5E	^	126	7E	~
31	1F	Ctrl-_ (US)	63	3F	?	95	5F	_	127	7F	DEL

Appendix B Programming Guide: 3170 Cash Drawer Driver

Note: If you are using the cash drawer with an OPOS, JavaPOS, or POS for .Net application, this document does not apply to you. You will need to use the correct driver available on the UTC RETAIL web site at www.utcretail.com.

Microsoft® Windows® Softwareⁱ

If you purchased your 3170 POS with a Windows® operating system pre-installed on it, you will find a Cash Drawer Utility folder within the Drivers folder on the hard drive. In the Cash Drawer Utility folder there are two additional folders. In cdbox48C there exists both source code and executables for DOS and Windows environments. In the 3170 Cash Drawer folder, there is Visual Studio source code and an executable.
